

【Phrozen Resin User Guide】


Standard Resin Speed Plus, Black

Outline

Before printing the perfect object, it is important to first understand the material limitations we are handling and how it can be successfully printed under various conditions. With this in mind, Phrozen provides the following design suggestions to help you better understand the properties of each material and how you can best utilize them to bring your wildest creation to life.

Table of Contents

TDS.....	1
Printing	2
Printing Parameters.....	2
Cleaning.....	6
Post-Curing.....	6
Design Specifications	7
Minimum Unsupported Wall Thickness.....	7
Size Tolerance, X-Y plane.....	7
Minimum Pin Diameter	8
Minimum Hole Diameter, X-Y plane.....	8
Minimum Embossed Detail Width, X-Y plane	9
Minimum Engraved Detail Width, X-Y plane.....	9
Maximum Horizontal Bridge Span	10
Minimum Hole Diameter and Engraved Detail Width, Z-axis, at 0.05mm layer height....	10
Block shrinkage test, at 0.05mm layer height	11

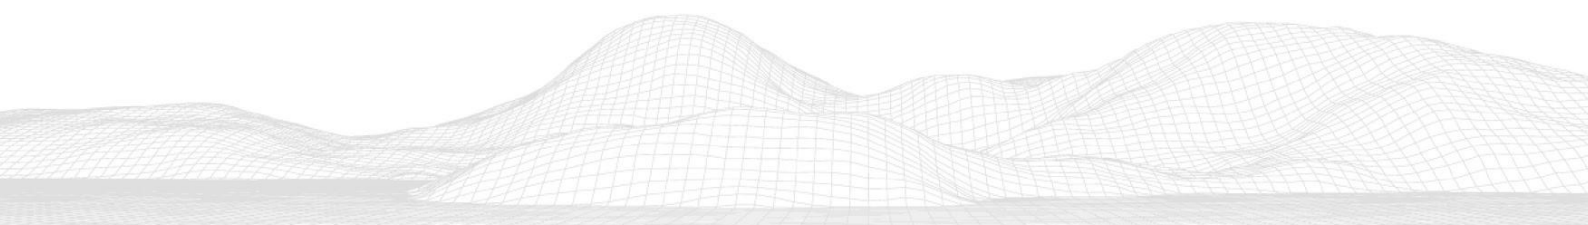

Section 1

TDS

General Properties	Norm	Typical values
Appearance	-	Black
Viscosity	BROOKFIELD Viscometer(LV)	150 - 250 cps
Density (liquid resin)	ASTM D4052-18a	1.14 g/cm ³
Tensile Properties	Norm	Typical values (UV post-cured)
Tensile Strength at Break	ASTM D638	43.6 MPa
Tensile Modulus	ASTM D638	2414 MPa
Elongation at Break	ASTM D638	5.7 %
Impact Properties	Norm	Typical values (UV post-cured)
Notched Izod (Machined), 23 °C	ASTM D256	39.2 J/m
Thermal Properties	Norm	Typical values (UV post-cured)
HDT at 0.45 MPa	ASTM D648	64.8 °C
Hardness	Norm	Typical values (UV post-cured)
Shore D	ASTM D2240	85 – 88D

** All testing specimens are printed using Phrozen Sonic Mighty 8K or Sonic Mini 8K, and post-cured using Phrozen Wash & Cure Kit.*

Specimens are printed unless stated otherwise. The information in this TDS, including product recommendations, is based on our current knowledge and experience.

Descriptions, drawings, photographs, data, proportions, weights, etc. provided may change without notice and do not establish the product's contractual quality.

Request the relevant MSDS from your supplier or contact Phrozen Tech Co., Ltd at sales@phrozen3d.com

Section 2

Printing

Printing Parameters

Printer	Sonic mini / Sonic mini 4K
Layer Height	50 μm
Exposure Time	1.5 ± 0.5 s
Bottom Exposure Time	12.5 ± 2.5 s
Light-off Delay	10 s
Lift Distance	6 mm
Lifting Speed	60 mm/min

Printer	Sonic Mini 8K
Layer Height	50 μm
Exposure Time	2 ± 0.5 s
Bottom Exposure Time	17.5 ± 2.5 s
Light-off Delay	1.5 ± 0.5 s
Lift Distance	6 mm
Lifting Speed	60 mm/min

Printer	Sonic Mini 8K S
Layer Height	50 μ m
Exposure Time	1.5 $\pm$ 0.5 s
Bottom Exposure Time	9.5 $\pm$ 2.5 s
Light-off Delay	1.5 $\pm$ 0.5 s
Lift Distance	6 mm
Lifting Speed	60 mm/min

Printer	Sonic Mighty 4K
Layer Height	50 μ m
Exposure Time	2 $\pm$ 0.5 s
Bottom Exposure Time	12.5 $\pm$ 2.5 s
Light-off Delay	11 s
Lift Distance	8 mm
Lifting Speed	60 mm/min

Printer	Sonic Mighty 8K
Layer Height	50 μ m
Exposure Time	2 $\pm$ 1 s
Bottom Exposure Time	7.5 $\pm$ 2.5 s
Light-off Delay	2 $\pm$ 1 s
Lift Distance	8 mm
Lifting Speed	60 mm/min

Printer	Sonic Mighty 12K
Layer Height	50 μ m
Exposure Time	2 $\pm$ 0.5 s
Bottom Exposure Time	7.5 $\pm$ 2.5 s
Light-off Delay	2 $\pm$ 1 s
Lift Distance	8 mm
Lifting Speed	60 mm/min

Printer	Sonic Mighty Revo 14K
Layer Height	50 μ m
Exposure Time	2 $\pm$ 0.5 s
Bottom Exposure Time	30 $\pm$ 5 s
Light-off Delay	2.5 $\pm$ 1 s
Lift Distance	8 mm
Lifting Speed	60 mm/min

Printer	Sonic Mighty Revo 16K
Layer Height	50 μ m
Exposure Time	1.2 $\pm$ 0.5 s
Bottom Exposure Time	8 $\pm$ 5 s
Light-off Delay	3 s
Lift Distance	8 mm
Lifting Speed	60 mm/min

Printer	Sonic Mega 8K*
Layer Height	50 μ m
Exposure Time	2.5 $\pm$ 0.5 s
Bottom Exposure Time	20 $\pm$ 5 s
Light-off Delay	3 $\pm$ 2 s
Lift Distance	8 mm
Lifting Speed	60 mm/min

Printer	Sonic Mega 8K S*	
Layer Height	50 μ m	100 μ m
Exposure Time	1.5 $\pm$ 0.5 s	2 $\pm$ 0.5 s
Bottom Exposure Time	15 $\pm$ 5 s	15 $\pm$ 5 s
Light-off Delay	3 $\pm$ 1 s	3 $\pm$ 1 s
Lift Distance	8 mm	8 mm
Lifting Speed	60 mm/min	60 - 600 mm/min

Printer	Sonic Mega 8K V2*
Layer Height	50 μ m
Exposure Time	1.5 $\pm$ 0.5 s
Bottom Exposure Time	20 $\pm$ 5 s
Light-off Delay	3 $\pm$ 2 s
Lift Distance	8 mm
Lifting Speed	60 mm/min

- ♦ Sonic Mega 8K / Mega 8K S / Mega 8K V2 has a higher peeling force. Therefore, a longer exposure time is necessary to increase the success rate.
- ♦ Be sure to cover the hood when printing to maintain the best printing condition of the resin.
- ♦ Printing parameters for Speed Resin, Gray's are also suitable with this resin.
- ♦ This resin can withstand the pulling force generated by rapid Z-axis lift and retract. (To adjust the speed of the Z-axis, please refer to the user manual.)
- ♦ The Printing parameters are test data. Variations may occur with different printing conditions, so the exposure time can be adjusted accordingly.

Cleaning

1. After removing the printed object from the building plate, use the Phrozen Wash and Cure Kit for post-processing.
2. Soak the object in the Washing Station filled with 95% alcohol for 45-60 seconds to remove uncured resin from the surface. Do not soak models in
3. solvent for more than 60 seconds as it may damage model surfaces.
4. Make sure to clean the inner parts of hollow objects completely.
5. After thoroughly cleaning the object, leave it in a cool, well-ventilated place for at least 30 minutes. Alternatively, you may gently use a compressed air gun to dry the printed object.

*When printing flat on the building plate, remove the printed objects carefully to avoid deformation on the objects.

Post-Curing

1. Use Phrozen post-curing stations (Phrozen Wash & Cure Kit / Phrozen Cure Mega S) or other post-curing lamps with the same wavelength to cure printed objects.
2. Cure the printed objects for 30 minutes for the best results.

Section 3


Design Specifications

※Note: All indicators are limited to each resin; the value will vary with different machines and environmental conditions.

Minimum Unsupported Wall Thickness

This indicator shows the minimum wall thickness that can be printed independently with no support without causing any bending or breaking.


Recommended thickness : $\geq 0.4\text{mm}$

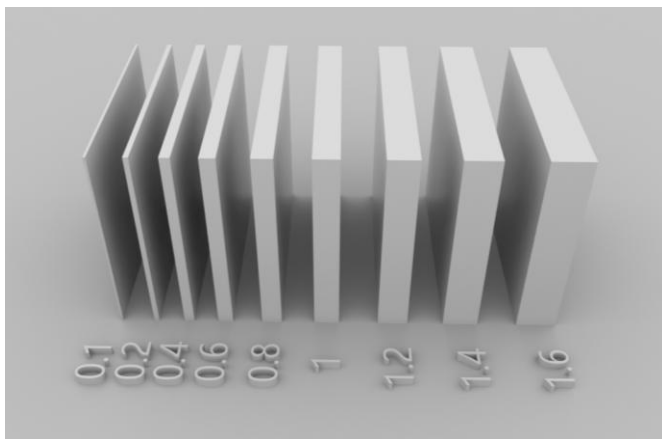

Size Tolerance, X-Y plane

This indicator shows the minimum dimensional tolerance between the hole and the column parallel to the XY plane.


Recommended tolerance : $\geq 0.04\text{ mm}$

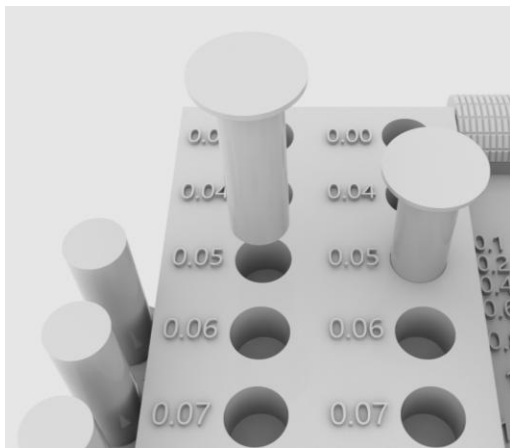

Minimum Pin Diameter


This indicator shows the minimum column diameter of pillars and supports that can be printed independently without bending or breaking.

Recommended diameter : $\geq 0.7\text{mm}$

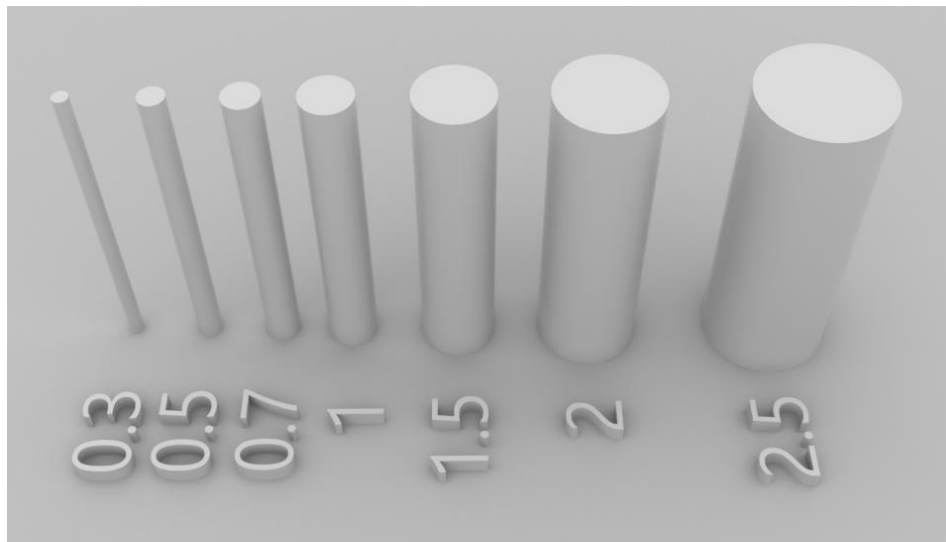

Minimum Hole Diameter, X-Y plane


This indicator shows the minimum hole diameter that can be successfully printed parallel to the XY plane. Recommended diameter : $\geq 0.3\text{mm}$

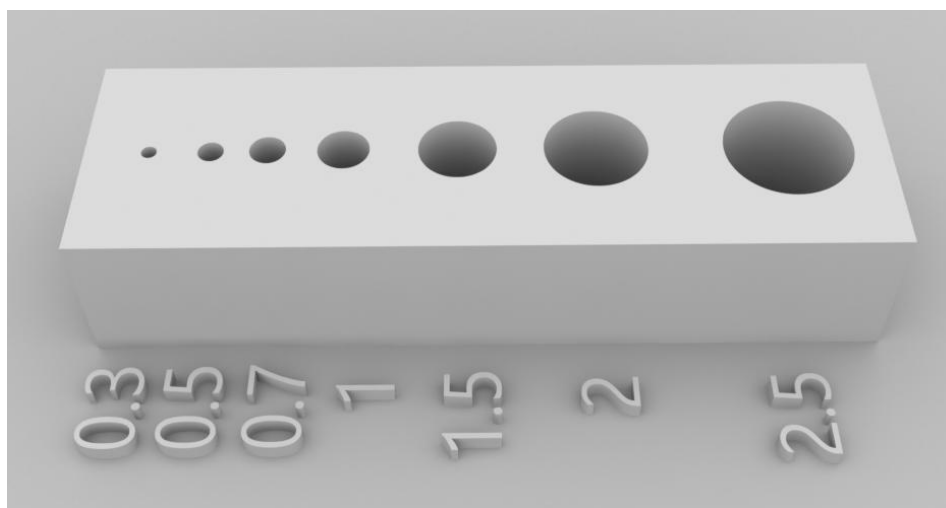

Minimum Embossed Detail Width, X-Y plane

This indicator shows the minimum line width that can successfully be printed with embossed details.


Recommended width: $\geq 0.1\text{mm}$

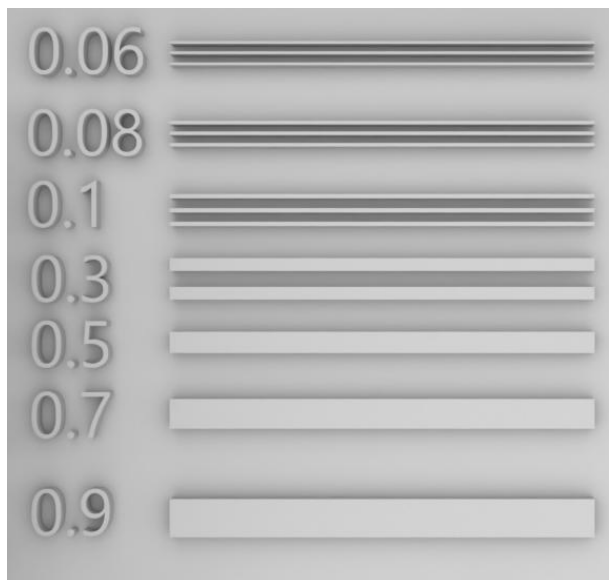

Minimum Engraved Detail Width, X-Y plane

This indicator shows the minimum line width that can successfully be printed with engraved details.

Recommended width: $\geq 0.06\text{ mm}$

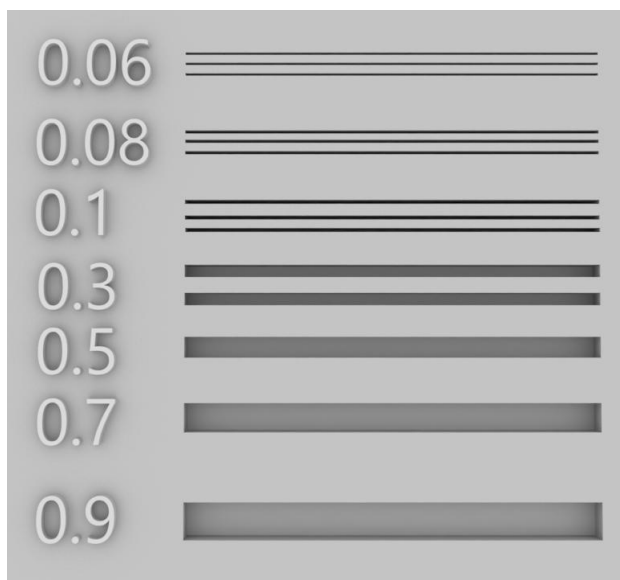

Maximum Horizontal Bridge Span

This indicator shows the maximum width between the supporting walls that can be printed without deforming the bridge.

Recommended width : $\leq 5\text{mm}$




Minimum Hole Diameter and Engraved Detail Width, Z-axis, at 0.05 mm layer height

This indicator shows the minimum hole diameter and engraving groove width that can be successfully printed on the Z-axis with a layer thickness of 0.05 mm.

Recommended diameter : $\geq 0.5\text{ mm}$

Recommended width : $\geq 0.06\text{ mm}$

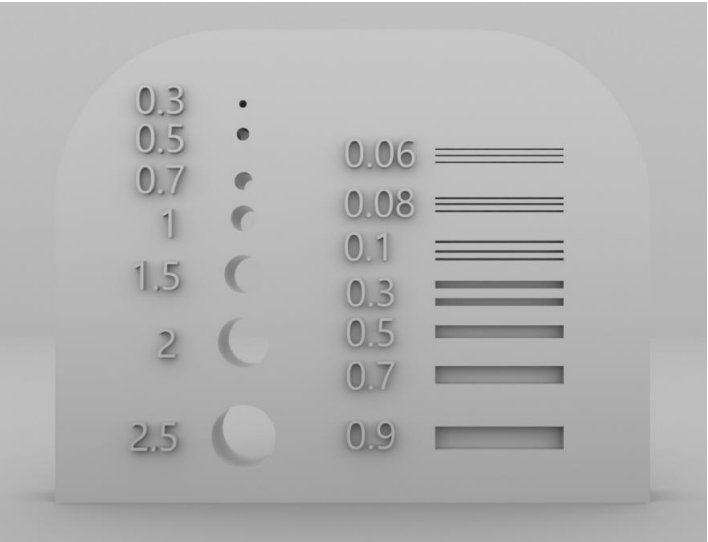

Block shrinkage test, at 0.05mm layer height

This indicator shows the possible deformation for a 2x2x1 cm cuboid printed parallel to the XY plane. A Vernier caliper is used to measure the cuboid after post-curing to calculate the shrinkage rate. (This test result is only for reference purposes. Different machines and models may affect results.)

Calculation method: $[(\text{Cured size} - \text{Original size}) / \text{Original size}] \times 100\%$

X-Axis Recommended Shrinkage Rate: -0.4%

Y-Axis Recommended Shrinkage Rate: -0.3%

