



USB Air Purifier

Dear User

Thank you for joining us. Please read the manual thoroughly and follow the instructions step-by-step to get the best printing experience.

親愛的使用者您好

非常開心您的加入，為了您良好的使用體驗，請務必詳閱說明書。



Introduction | 產品介紹

PART.1


Top Cover
上蓋

PART.2

Power Switch
電源開關

PART.3

LED Indicator
指示燈

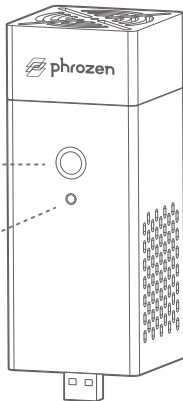

Activated Carbon Filter
活性炭濾心



USB Air Purifier
USB 空氣清淨機

Product Specifications 產品規格

機器尺寸 | Product Size | 125 x 46 x 46 mm

濾心尺寸 | Activated Carbon Filter Size | 39 x 39 x 18 mm

輸入電壓 | Input | DC 5V : 1A

額定功率 | Power | 0.35W

重量 | Weight | 110g

User Guide | 使用說明


- 1 Open the air purifier cover, place the activated carbon filter inside, and secure the cover.
- 2 Insert the air purifier into the USB port on top of the printer.
- 3 Press the power button of the air purifier, the indicator light will turn green to indicate it is operating. Press the power button again to stop the operation.

- 1 打開空氣清淨機上蓋，放入活性碳濾心並蓋緊上蓋。
- 2 將空氣清淨機插入列印機上方USB插孔。
- 3 按下空氣清淨機電源開關，指示燈顯示綠色，即開始運行。
再次按下電源開關，即停止運行。

- Light On : Turn on / 機器運轉中
○ Light Off : Turn off / 機器關閉

NOTICE ⚠ 注意事項

- Replace the activated carbon filter every 3–6 months for the best result.
- For safety, keep the device and its accessories out of the reach of children.
- Expose the used filter to sunlight or place it in a well-ventilated area to dissipate odors.
- 每3-6個月需定期更換活性碳濾心，以保持空氣清淨機的效能。
- 請將機器及配件放置於兒童觸碰不到的地方。
- 短期內，可將使用過的活性碳濾心放至陽光下曝曬、或置於空氣流通處，揮發吸附的異味。

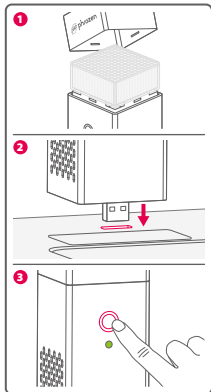

Hazardous Substances 產品有毒有害物質元素清單

Part 部件	Pb 鉛	Hg 汞	Cd 鎘	Cr(VI) 六價鉻	PBB 多溴聯苯	PBDE 多溴二苯醚
Plastic Parts 塑膠物件	○	○	○	○	○	○
Metal Parts 金屬物件	×	○	○	○	○	○
Circuit Board Assembly 電路板組件	×	○	○	○	○	○
Cables and Wires 線材類	×	○	○	○	○	○

This table is made according to SJ/T 11364.

○ : Indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

× : Indicates that the concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572.

本表格根據SJ / T11364的規定編製

○ : 表示該有害物質在該部件所有均值材料中的含量均在GB/T26572-2011規定的限值要求以下。

× : 表示該有害物質至少在該部件的某一均值材料中的含量超過GB/T26572-2011規定的限量要求。

Phrozen 3D Printer

🌐 phrozen3d.com ☎ +43-1-997809410 / +886-3-621-0505

📍 3F., No.287, Niupu Rd., Xiangshan Dist., Hsinchu City 30091, Taiwan



APEX CE SPECIALISTS LIMITED

Unit 3D North Point House, north Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland
Tel: +353212066339

E-Mail: info@apex-ce.com



APEX CE SPECIALISTS LIMITED

89 Princess Street, Manchester, M1 4HT, UK
Tel: +441616371080

E-Mail: info@apex-ce.com